

MANUAL FOR ST-1003

Item no. ST-1003

FEATURE:

Wireless machanical ding dong door bell

Wireless distance range 100 meter

Melody : Ding-dong sound only

Sound volume : 80dB

Frequency 433MHz

Learning code to connect transmitter and door bell

Transmitter with self-name card and IP44 proof for outdoor using.

Power supply :

Transmitter by 1pcs 12V/23A battery

Door bell by 4pcs C size battery

- TRANSMITTER INSTALLATION

- 1.Open the plastic cover by straight screwdriver
- 2.Install the base of transmitter on the wall by two screws (included) or by double-side adhesive tape(included)
- 3.Insert the battery 12V/23A(included) into the groove of base
- 4.Fix the white/black cover onto the base
- 5.Add silicone ring to the groove between cover and base
- 6.Place the name label on the transmitter and cover the transparent lid to the transmitter




- CONNECT TRANSMITTER TO DOOR BELL

1.Open transmitter by a straight screwdriver then fill 12V/23A

battery(included) to transmitter , push the button and make sure the red LED lighting.

2.Open door bell cover by hand and fill 4pcs C size batteries (no included) according the correct position on plastic base.

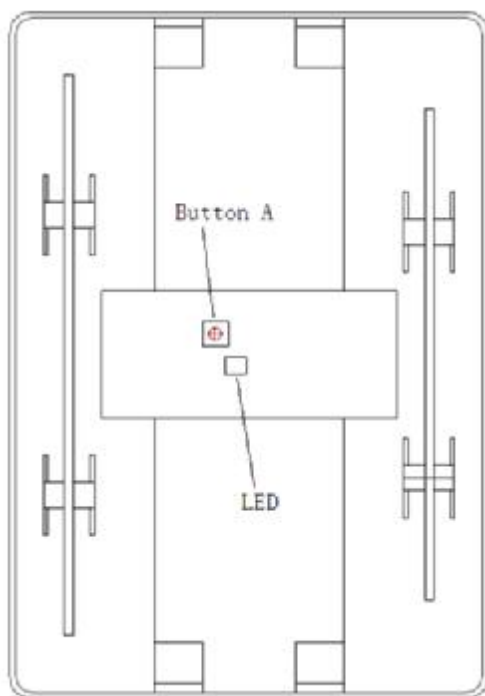

3.Push the button “A” on door bell and keep it 3s , the blue LED near the button will start shining, then release the button “A” , push the transmitter to work ,then door bell will working one time .You transmitter have connected to the door bell now.

4.One door bell can connect many transmitters, also one transmitter can connect to many door bells ,not limited.

- CANCEL THE CONNECTION

Push the button “A” on door bell and keep it , we need to count the times of LED shining, 1,2,3...19,20 , when the twentieth shine working ,we release the button “A” , LED will fast shining one time , then all the connected transmitters with this door bell are canceled.

- Place the door bell by two ways

- 1.Standing on table or other flat position freely
- 2.Hang on wall by the screw(included)

- REMARK

Walls scope reduction

