 


220-240V~ 50Hz 30W

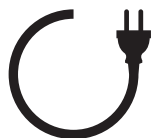 


Effekt: 30W
Leveres med 1,5 m kabel.
Motoren er overoppheting beskyttet.

Power: 30W
Supplied with 1.5 m cable.
The engine is overheating protected.


Parts/Deler

1. Grid/gitter
2. Blade/blad
3. Angle adjustment knob/
vinkeljustering knapp
4. Fan stand/viftestativ
5. Swing control/svingkontroller

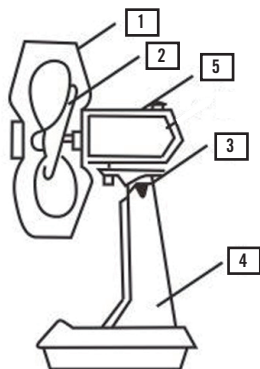

Mounting/Montering

 1. Grid/gitter
2. Blade nut/låsemutter for blad
3. Blade/blad
4. Rear mesh retaining nut/
bakre rist låsemutter for rist
5. Grill/rist
6. Engine/motor
7. Swing control/svingkontroller
8. Back cover/bakdeksel

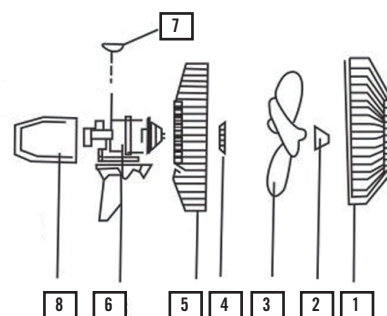

NO:

Installer først gitteret, så vifte bladet. Vri mutteren til venstre for å feste bladet og deretter hold sammen gitterets front og bak og fest dem sammen med plastikk ringen.

Luftstrømningshastigheten kan justeres ved hastighetsregulering bryter.

- 1: Lav hastighet.
- 2: Rask hastighet.
- 0: Stopp.

Ved bruk i en bestemt retning bruk sving kontrollknappen. Stigningsvinkel kan justeres ved å stille på vinkel vinkeljusterings knappen.

EN:

First install grid, then the fan blade. Turn the nut left to attach the blade and then hold together the grid front and rear and fasten them together with plastic ring.

Air flow rate can be adjusted by speed control switch.

- 1: Low speed.
- 2: Fast speed.
- 0: Stop.

When used in a particular direction using swing control button. Pitch angle can be adjusted by setting the angle adjustment knob.

VEDLIKEHOLD

1. Kutt strømførsel før rengjøring.
2. Rengjør viften med en myk klut og et nøytralt vaskemiddel.

MAINTENANCE

1. Unplug fan before cleaning.
2. Clean the fan with a soft cloth and mild detergent.