

Limited liability Mill International AS shall not be liable for damages related to failure or loss of data arising from incorrect operations and handling of the device. Terms & conditions millheat.com/privacy-millheat-app For other languages or additional questions go to millheat zendesk com The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Mill International AS is under license.

Copyright Mill International AS

or visit us at millheat.com Use dry cloth to clean Mill Sense Air. Max transmitting power: ≤20dBm Frequency range: 2.4 ~2.5GHz

Mill sense air is intended for indoor use only.

Avoid exposure to direct heat sources.

Do not disassemble. If the device does not work as

specified or you are in doubt, contact your local dealer

Place away from vents and windows.

 
Avoid direct exposure to sunlight for long periods.

Safety and use



post@millheat.com









Sense Air



Before you start!

Make sure:

Your smartphone has a working internet connection

Disable any firewalls or VPN that might block the device from communicating with our server

Bluetooth is enabled





Download the Millheat App and create an account







Follow in-app instructions to connect the device*





Place the device on a flat surface or attach to a wall using the provided wall mount plate with double sided tape

Place away from vents and windows (minimum 1 meter)

Place away from direct heat sources

Avoid exposure to direct sunlight





Do you have any questions, issues or want to give us feedback?

We are here to help!

appsupport@millheat.com

Need more information?

A detailed manual is available in the below languages at manuals.millheat.com/senseair









