

mill

Series:

Invisible & Glass
WiFi panel heater



Assembly and instruction manual



EN

NO

DK

SE

FI

Please read the instructions carefully before use.
Take good care of this manual for later use.





Scandinavian home comfort

Mill is a Norwegian brand that develops heating and indoor air quality products tailored for your modern home. Inspired by Scandinavian nature, our products are designed to sustain the toughest of climates to ensure safe, efficient and comfortable temperatures, as well as good air quality.

Mill products are praised for their minimalistic and elegant features as they blend in naturally with any modern interior. Our advanced and user-friendly technology will support a relaxing and healthy home space with reliable temperatures and air quality. Mill's vision is to develop products that create an enjoyable and harmonic household atmosphere, enhancing both comfort and style; the ultimate Scandinavian home comfort.

We hope you enjoy your Mill product.

User manual in local language is available at millnorway.com

Improving our environmental footprint is a key priority for Mill. Reducing the consumption of paper is one of the steps in Mills Sustainability program. If you need a printed copy please contact us at post@millnorway.com. Safety information in local language is available at the back of this booklet.

Follow us on social media:

 fb.com/millnorway

 
 @millnorway

 millnorway.com



Content

- P. 2-3 | Important safety information
- P. 4 | Specifications
- P. 4 | Before first use
- P. 5 | First use
- P. 5 | Minimum distances of heater
- P. 5 | Description of heater
- P. 5 | Assembly
- P. 5 | Power indicator
- P. 5 | Temperature calibration
- P. 6 | Resetting the heater
- P. 6 | Memory function
- P. 6 | "Open window" function
- P. 6 | Instructions
- P. 7 | Usage without WiFi connection
- P. 7 | Child lock
- P. 7 | Commercial lock
- P. 7 | Usage with WiFi connection
- P. 8 | Color codes (WiFi control light)
- P. 9 | Activating WiFi
- P. 9 | Deactivating WiFi
- P. 9 | Reconnecting to WiFi
- P. 9 | Delete WiFi settings
- P. 10 | Maintenance
- P. 10 | Warranty
- P. 10 | Waste disposal

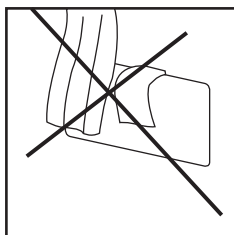

**STORE THIS INSTRUCTION
MANUAL FOR FUTURE USE!**

**NEVER TOUCH YOUR HEATER OR ITS
CASING WITH WET HANDS!**



**IN ORDER TO AVOID OVERHEATING,
DO NOT COVER THE HEATER.**



Important safety information

You must obey common safety guidelines when using electrical products, especially in the presence of children.



WARNING! To avoid electric shock or damage due to the heat, always make sure the plug is pulled out before the heater is moved or cleaned.

READ THE INSTRUCTIONS CAREFULLY

- The product is intended for home use only.
- Make sure the heater is connected to the house's regular mains as indicated on the heater.
- New heaters will produce a specific odor when used the first time. This will stop after a short time and is completely harmless.
- Check for any pieces of packing foam or cardboard that may have fallen into the heating elements of the heater. These pieces must be removed to avoid unpleasant odors.
- Prevent the heater from overheating — **do not cover.**
- Always turn off the heater and unplug it when not used for a long period of time.
- Pay special attention if the heater is used in rooms where children, the handicapped or elderly reside.
- The heater should not be set up directly beneath an electrical socket outlet.
- The cord must not be laid under any kind of carpet. Make sure the cord is laid in such a way that nobody can trip on it.
- The heater must not be used if either the cord or plug is damaged. The heater must not be used if it has been dropped on the floor or is damaged in any other way causing it to malfunction.
- The cord must be repaired by the manufacturer or by an expert if it has been damaged, to avoid dangerous situations.
- Avoid using extension cords, which may overheat and could possibly start a fire.
- Never cover the air vents on the heater. Avoid potential fire hazards by making sure the air intakes are not blocked or covered. The heater should be used in rooms with normal flat floors.



- The heater should not be installed in close proximity to flammable materials of any kind because there can always be a risk of fire.
- The heater must never be used in rooms where gasoline, paint or other flammable liquids are stored, such as in a garage.
- Never touch an electric heater with wet hands. The heater should be installed so a person showering or taking a bath cannot come into direct contact with it.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The heater must be switched off, the plug removed and the heater must cool down before it is moved.
- Avoid overloading the mains (the circuit) where the heater is connected. The heater may overload the electrical circuit if other electrical devices are plugged into the same socket outlet.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- The product cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or lack of experience and knowledge unless they have been given supervision or instruction in the safe use of the product and understand the hazards involved.
- Children should not play with the product. Cleaning and maintenance should not be done by unsupervised children.
- Children under the age of 3 should be kept away from the product, unless they are under constant supervision.
- Children aged 3 to 8 years are only permitted to turn the product ON/OFF, assuming the heater is mounted according to the assembly instructions and the children have received instruction or supervision in the safe use of the product and understand the hazards involved.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

WARNING! The heater must not be used if the glass panels are damaged (this applies to the products with model names starting with GL).



Specifications

Model	Thermostat	Color	Height	Width	Amperage	Power (W)	IP	WiFi
GL400WIFI3	WiFi	White	38,4 cm	50,7 cm	220-240V~, 50-60Hz	400	IPx4	802.11b/g/n
PA400WIFI3	WiFi	White	38,4 cm	49,2 cm	220-240V~, 50-60Hz	400	IPx4	802.11b/g/n
PA600WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
GL600WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
GL600WIFI3B	WiFi	Black	40,0 cm	66,5 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA600WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA700WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
PA700WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL700WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL700WIFI3B	WiFi	Black	40,0 cm	66,5 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL800LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA800LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA850LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
GL850LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
PA900WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
GL900WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
PA1000WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
PA1000LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
PA1000LWIFI3B	WiFi	Black	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000LWIFI3	WiFi	White	25,0 cm	123,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000LWIFI3B	WiFi	Black	25,0 cm	123,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1050LWIFI3	WiFi	White	40,0 cm	123,0 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
GL1050LWIFI3B	WiFi	Black	40,0 cm	123,0 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1050LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1050LWIFI3B	WiFi	Black	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1200WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
PA1200WIFI3B	WiFi	Black	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
GL1200WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
GL1200WIFI3B	WiFi	Black	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
PA1300WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
PA1300WIFI3B	WiFi	Black	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
GL1300WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
GL1300WIFI3B	WiFi	Black	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
PA1500WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1500	IPx4	802.11b/g/n
PA2000WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	2000	IPx4	802.11b/g/n

Maximum transmitting power: ≤ 20 dBm

Frequency range: 2400-2483.5MHz

The heaters are approved for use in zone 2 in wet rooms (IPx4 approved)

ATTENTION! The heaters will be connected directly to your WiFi router and it is therefore important to make sure the router has sufficient capacity for the number of active devices connected at the same time.

Before first use

After unpacking the heater, check to make sure the product was not damaged during transport. Contact the retailer or importer if you discover any visible damages to the product.

Keep the outer packaging to transport the heater in the future. If you want to dispose the packaging, make sure it is done properly. Keep plastic bags away from children.

 
First use

After turning on the heater for the first time or after an extended period without use, the heater can produce a burnt odor for a short time. This is normal.

Please read all the instructions carefully before use. Save the instruction manual for future use.

It is also normal for the heater to make “sounds” when it warms up or cools down.

Minimum distances

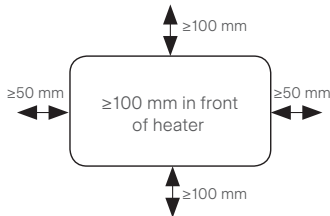

Description of heater

See figure 1 on separate illustration sheet

<p>A MILL INVISIBLE</p> <ol style="list-style-type: none"> 1. On/Off 2. Wall bracket 3. Temperature sensor 4. Heat emission 5. Thermostat 6. Steel front 	<p>B MILL GLASS</p> <ol style="list-style-type: none"> 1. On/Off 2. Wall bracket 3. Temperature sensor 4. Heat emission 5. Thermostat 6. Glass front
--	--

Assembly

See figure 2 on separate illustration sheet

- A. Drill holes in the wall for holes 1 & 2. Then drill holes in the wall for the topmost holes (holes 3 & 4 by using 6)
- B. Insert the wall plugs into the drilled holes and attach the bracket with 4 screws
- C. Place the heater on the lower lugs on the bracket, then hang the heater on the upper lugs (lift the heater slightly to align the heater with for the upper lugs). Screw in the locking screws on the top of the bracket (clockwise)

Attention! Horizontal placement only

Power Indicator

See figure 3 on separate illustration sheet

If the heater uses power (for example, when it heats up), the power indicator is on. ⚡



Temperature calibration

See figure 4 on separate illustration sheet

It may occur deviation between the temperature registered by the heater and the





actual temperature in the room. This can be caused by several reasons, however, the most common is that the heater is placed in a fair distance from where you usually reside. When you set the temperature to for example 22 degrees, it is only natural that you expect the same temperature where your sofa is placed for instance. However, the temperature sensor is placed on the product itself, and therefore a deviation in temperature may occur. To adjust this, all Mill heaters are equipped with a calibration function, which enables you to adjust the temperature registered by the heater. N.B! The room must have achieved a stable temperature before any calibration

Press  2 times and use + or - to set the actual temperature observed in the room. Confirm with  or wait 5 seconds for automatic confirmation.

(Can be done even if you are connected to WiFi)

Resetting the heater

See figure 5 on separate illustration sheet

Turn off the heater's main switch. Turn the heater back on, within 5 seconds press and hold . After 20 seconds the display will show "Fr", once you see "Fr" release  and the heater will reset to factory settings.

Memory function

The heater remembers all the temperature settings and will automatically return to the desired temperature after a power failure. If your heater is connected to WiFi it will automatically reconnect with WiFi (where all temperatures are saved) after a power cut.

"Open window" function

The heater has an "open window" function that is activated instantly when it registers a sudden drop in temperature with more than 5 degrees Celsius in 15 minutes. The heater will automatically stop heating and FO will be visible in the display of the heater.

While in open window mode, it will maintain 5°C (to avoid frost damage).

The heater will automatically start heating again if temperature increase by at least 3 degrees within 15 minutes.

You can switch the heater back to normal mode by pressing the settings button 1 time. Open window function can be disabled/enabled by pressing and holding the settings button for 3 seconds. You can also disable/enable open windows function from the app if configured to WiFi.

The heater will stay in open window mode for maximum 1 hour, it then will go back to normal heating mode.

Instructions

TIPS! The thermostat can be used as a regular electronic thermostat (i.e. the heater will maintain a constant temperature 24 hours a day). Please see the section explaining usage without WiFi connection for further information

Control Panel

See figure 6 on separate illustration sheet

1. Display (shows the desired room temperature by default)
2. WiFi indicator
3. Power indicator — Shows whether the heater is using power or not
4. Control button (+) (increase temperature)
5. Control button (-) (reduce temperature)
6. WiFi button
7. Settings button (F)
8. LED lights indicating how much power the heater is using

ATTENTION! In the event of a power cut, the thermostat will reconnect with WiFi where all the temperatures are saved.

WARNING! BEFORE THE HEATER IS TURNED ON, IT MUST BE ATTACHED TO A WALL. IF THE HEATER IS NOT INSTALLED CORRECTLY OR IS INSTALLED ASKEW, THIS MAY CAUSE



Usage without WiFi connection

Set desired temperature without WiFi connection



See figure 7 on separate illustration sheet

Press the arrow buttons to set the desired temperature. The heater keeps an even temperature the whole day and night.

Child lock

You can enable/disable child lock from the app. But in addition, you can also enable/disable child lock from the heater itself. Turn off the heater using the main power switch. Turn the heater back on, within 5 seconds press the and hold . After 3 seconds the display will show "CHL", once you see "CHL" release  and the heater enables/disables child lock.

Commercial Lock

You can enable and disable commercial lock from inside the app. But in addition, you can enable/disable commercial lock from the heater itself. Turn off the heater using the main power switch. Turn the heater back on, within 5 seconds press the and hold . After 10 seconds the display will show "COL", once you see "COL" release  and the heater enables/disables commercial lock.

Usage with WiFi connection

A free app is available for downloading for iOS and Android.

By connecting your heaters with the iOS/Android device you can do the following:





- Control all your heaters situated in multiple locations . Everything is controlled with the Mill app (with same user)
- Set up weekly programs (or use the standard program already available in the app) by using the 4 modes: Comfort, Sleep, Away and OFF
- Set individual temperature for different modes in each room
- Override the set programs for the whole house, a specific room or a specific heater. There is no need to edit your program if you get home earlier than normal one day
- Enable vacation mode for saving energy while you are away. The app will automatically increase the temperature in your house before you get back home
- Share your house with other family members, making control easy
- If internet is down the heater will follow its weekly program which is stored on the heater.

One can easily turn off the WiFi on the heaters and control them manually, so that the heaters keep an even temperature throughout the whole day and night.

- + many other things

To download the app search for “MillNorway” in Appstore or Google Play and install the app on your device.



Before use:

Be aware that the Mill app must be installed before you can connect your heaters to your WiFi network. You can then simply follow the instructions given in the app when connecting your heaters. The heaters will connect directly to your router via WiFi with 2,4 Ghz mode b/g/n. Bluetooth is needed for provisioning, so make sure its enabled. Minimum OS requirement: iOS 8.0 and Android 5.0

Go to our help desk at www.millnorway.com for more information or if you have any questions regarding the Mill app, connecting to WiFi or other relating questions.





ATTENTION! The heaters will be connected directly to your WiFi router and it is therefore important to make sure the router has sufficient capacity for the number of active devices connected at the same time.

Color codes (WiFi control light)

-  The heater has not been connected to WiFi. The heater keeps an even temperature throughout the whole day and night.
-  The heater is online in the Mill cloud



millnorway.com

-  The heater's WiFi is deactivated by the user
-  When installing/connecting the Mill app and cloud, the light will flash in various speed. This is normal.
-  The heater has a problem connecting to or finding the WiFi si the following:
 1. Please turn the heater OFF and ON again
 2. Please restart the WiFi router
 3. Please check the WiFi router to make sure the capacity is sufficient for the number of active devices connected at the same time
 4. Please make sure 2,4 Ghz is activated. If the problem persists please get in touch with support.
-  The heaters are offline and have no contact with the Mill cloud

Activating WiFi

See figure 8 on separate illustration sheet

Press «add heater» on the home screen in the Mill app. Follow the instructions in the app.

Deactivating WiFi

See figure 9 on separate illustration sheet

Press 1 time on the WiFi button. The heater can now be used as described on page 7 (usage without WiFi connection). Relevant only if WiFi is already installed.

Reconnecting WiFi

See figure 10 on separate illustration sheet

Press the WiFi button 1 time. Relevant only if WiFi is already installed.

Delete WiFi setting

See figure 11 on separate illustration sheet

Delete WiFi-settings: Press and hold WiFi button for 5 seconds



Maintenance

1. For cleaning, always unplug the heater and leave it to cool.
2. Wipe the heater regularly with a damp cloth and dry the surface before turning on the heater again.
3. The heater must be cleaned at least once a month during the heating season.

CAUTION! The heater should never be immersed in water.

Avoid using detergents to clean the heater.


Never let any water get inside the heater; this can be hazardous.

4. Dust etc. should be removed with a soft cloth.
5. The heater can be stored in a dry and clean place.
6. If the heater stops working, do not attempt to repair it yourself because it can cause a fire hazard and/or electric shock.

Warranty

The warranty is valid for 2 years. The heater will be repaired or replaced during this time should any malfunction occur. The warranty applies if the heater is used according to these instructions and the customer can present a purchase receipt. If the heater malfunctions in any way, please contact the store where it was purchased or the importer.

Waste disposal

The symbol  indicates that this product is not to be disposed of together with household waste. This product must be delivered to a recycling service or container for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Local businesses (or the environmental station in your neighborhood) are required by law to accept and recycle such products, as a means of environmentally sound disposal.



mill

Mill International AS

Grini Næringspark 10

1361 Østerås

Norway


www.millnorway.com



Innholdsfortegnelse

- S. 2-3 | Viktig sikkerhetsinformasjon
- S. 4 | Spesifikasjoner
- S. 4 | Før førstegangsbruk
- S. 5 | Førstegangsbruk
- S. 5 | Minimumavstander
- S. 5 | Beskrivelse av ovnen
- S. 5 | Montering
- S. 5 | Strømindikator
- S. 6 | Kalibrering av temperatur
- S. 6 | Resette ovnen
- S. 6 | Huskefunksjon
- S. 6 | «Åpent vindu» funksjon
- S. 6 | Bruksanvisning
- S. 6 | Bruk uten WiFi-tilkobling
- S. 7 | Barnesikring
- S. 7 | Kommersiell lås
- S. 8 | Bruk med WiFi-tilkobling
- S. 9 | Fargekoder (WiFi kontrolllys)
- S. 9 | Aktivere WiFi
- S. 9 | Deaktivere WiFi
- S. 9 | Koble tilbake til WiFi
- S. 9 | Slette WiFi-innstillinger
- S. 10 | Vedlikehold
- S. 10 | Garanti
- S. 10 | Avfallshåndtering

 **Vennligst les bruksanvisningen nøye før bruk.
Ta godt vare på denne bruksanvisningen for senere bruk.**

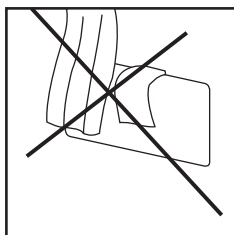

**TA VARE PÅ DENNE
BRUKSANVISNINGEN!**
**HA ALDRI VÅTE HENDER PÅ- ELLER
DEKK TIL OVNE!**



**FOR Å UNNGÅ OVEROPPHETING,
IKKE DEKK TIL OVNE.**



Viktig sikkerhetsinformasjon

Vanlige sikkerhetsregler må alltid følges ved bruk av elektriske artikler, spesielt når barn er tilstede.



ADVARSEL! For å unngå elektrisk støt eller skader på grunn av varme, pass alltid på at støpselet er trukket ut før ovnen flyttes eller rengjøres.

LES BRUKSANVISNINGEN NØYE

- Produktet er kun beregnet for hjemmebruk
- Sørg for at ovnen kobles til husets vanlige strømnnett slik ovenns merke viser
- Nye ovner vil avgi en egen lukt når den brukes første gang. Dette gir seg etter en kort stund og er helt ufarlig
- Sjekk at det ikke har falt rester (isopor/papp) fra innpakningen ned på varmeelementene i ovnen. Slike rester må fjernes for å unngå ubehagelig lukt
- Unngå at ovnen blir overopphetet- **må ikke tildekkes**
- Skru alltid ovnen av (Off) og dra ut kontakten når den ikke er i bruk over lengre tid
- Vær spesielt oppmerksom hvis ovnen er i bruk i rom hvor barn, handikappede eller eldre oppholder seg
- Ovnen må ikke stilles opp rett under et elektrisk kontaktpunkt
- Ledningen må ikke legges under tepper av noe slag. Påse at den ligger på en slik måte at ingen kan snuble i den
- Ovnen må ikke brukes hvis ledningen eller kontakten er skadet. Den må ikke brukes hvis den har falt i bakken (gulvet) eller er skadet på annen måte, slik at den ikke fungerer normalt
- Hvis ledningen blir skadet må denne bli reparert av en fagperson for å unngå farlige situasjoner
- Unngå å bruke skjøteledning, da en slik ledning kan bli overopphetet og muligens starte en brann
- Dekk aldri til luftinntakene på ovnen. Unngå en mulig brann ved å sørge for at ovenns luftinntak ikke er sperret eller tildekket. Ovnen brukes i rom med vanlige rette gulv



- Ovnens må ikke monteres rett ved brennbart materiale av noe slag da det alltid kan være en fare for brann
- Ovnens må aldri brukes i rom hvor det lagres bensin, maling eller andre lett antennelige væsker som for eks. i en garasje
- Ta aldri på en elektrisk ovn med våte hender. Ovnens monteres/ plasseres slik at en person som dusjer eller tar et bad ikke kan komme i direkte kontakt med den
- Enkelte deler av denne ovnen kan bli veldig varme og forårsake brennmerker på huden. Vær ekstra oppmerksom når barn og sårbare personer er tilstede
- Ovnens må være skrudd av, kontakten tatt ut og ovnen være kald før den blir flyttet på
- Unngå overbelastning på strømmettet (kursen) hvor ovnen er tilkoblet. Ta hensyn hvis andre elektriske apparater er koblet til samme strømuttak eller kurs
- Bruk aldri ovnen i små rom hvor personer som ikke er i stand til å forlate rommet av seg selv oppholder seg, med mindre de er under konstant tilsyn
- Produktet kan ikke benyttes av barn under 8 år og personer med reduserte fysiske eller psykiske evner eller som mangler erfaring og kunnskap, om de ikke får tilsyn eller instruksjoner om bruk av produktet på en sikker måte og forstår farene som er involvert
- Barn skal ikke leke med produktet. Rengjøring og vedlikehold skal ikke utføres av barn uten tilsyn
- Barn under 3 år skal holdes unna produktet med mindre de har kontinuerlig tilsyn
- Barn i alderen 3 til 8 år kan kun slå AV/PÅ produktet, forutsatt at ovnen er montert slik monteringsanvisningen viser, og barna har fått instruksjon eller tilsyn vedrørende bruk av produktet på en sikker måte og forstår farene som er involvert
- Bruk aldri denne varmeovnen i nærheten av badekar, dusj eller svømmebasseng

ADVARSEL! Ovnens må ikke brukes hvis glasspanelet er skadet (gjelder produkter som starter modellnavnet med GL).

Spesifikasjoner



Modell	Termostat	Farge	Høyde	Bredde	Størmstyrke	Effekt (W)	IP-grad	WiFi
GL400WIFI3	WiFi	White	38,4 cm	50,7 cm	220-240V~, 50-60Hz	400	IPx4	802.11b/g/n
PA400WIFI3	WiFi	White	38,4 cm	49,2 cm	220-240V~, 50-60Hz	400	IPx4	802.11b/g/n
PA600WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
GL600WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
GL600WIFI3B	WiFi	Black	40,0 cm	66,5 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA600WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA700WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
PA700WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL700WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL700WIFI3B	WiFi	Black	40,0 cm	66,5 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL800LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA800LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA850LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
GL850LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
PA900WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
GL900WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
PA1000WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
PA1000LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
PA1000LWIFI3B	WiFi	Black	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000LWIFI3	WiFi	White	25,0 cm	123,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000LWIFI3B	WiFi	Black	25,0 cm	123,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1050WIFI3	WiFi	White	40,0 cm	123,0 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
GL1050LWIFI3B	WiFi	Black	40,0 cm	123,0 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1050LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1050LWIFI3B	WiFi	Black	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1200WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
PA1200WIFI3B	WiFi	Black	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
GL1200WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
GL1200WIFI3B	WiFi	Black	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
PA1300WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
PA1300WIFI3B	WiFi	Black	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
GL1300WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
GL1300WIFI3B	WiFi	Black	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
PA1500WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1500	IPx4	802.11b/g/n
PA2000WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	2000	IPx4	802.11b/g/n

Maksimal sendeeffekt: ≤ 20 dBm

Frekvensområde: 2400-2483.5MHz

Ovnene er godkjent for bruk i sone 2 i våtrom (IPx4-godkjent)

OBS! Ovnene kobler seg direkte på WiFi-ruteren din og man må derfor forsikre seg om at ruteren har tilstrekkelig kapasitet for antall aktive enheter koblet til samtidig

Før førstegangsbruk

Etter utpakking av ovnen, kontroller om det er noen transportskader på produktet. Skulle det være synlige skader på produktet, ta kontakt med butikken eller importør.

Ta vare på ytteremballasjen for senere transport av ovnen. Om du ønsker å kaste emballasjen, sørg for at den blir kastet på forsvarlig vis. Hold plastposer unna barn.

 
Førstegangsbruk

Etter å ha skrudd på varmen første gang, eller etter et lengre opphold, vil det kunne lukte "brent" i en kort tid. Dette er normalt.

Vennligst les hele denne bruksanvisningen nøye før bruk. Ta vare på bruksanvisningen

Det er også vanlig at ovnen lager "lyder" i opp/ned-varmingsfasen.

Minimumsavstander

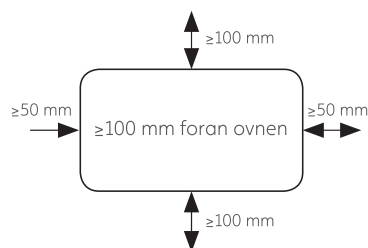

Beskrivelse av ovnen

Se figur 1 på separat figurark

A MILL INVISIBLE

1. Av/På
2. Veggbrakett
3. Temperatursensor
4. Utslipp varme
5. Termostat
6. Stålfrent

B MILL GLASS

1. Av/På
2. Veggbrakett
3. Temperatursensor
4. Utslipp varme
5. Termostat
6. Glassfront

Montering

Se figur 2 på separat figurark

Bruk målebånd og vater for å montere braketten.

- A. Lag hull i vegg for hull 1 & 2. Lag detterer hull i vegg for de øverste hullene (hull 3 & 4 ved hjelp av 6)
- B. Sett pluggene inn i hullene som er laget og fest braketten med 4 skruer
- C. Før ovnen på de nederste festene på brakketen, for så å hekte på ovnen på de øverste festene (løft noe for å få ovnen inn i sporet på de øverste festene). Skru fast låseskruene på toppen av brakketen (mot klokken)
OBS! Horisontal plassering kun.

Strømindikator

Se figur 3 på separat figurark



Når panelovnen trekker strøm (dvs når ovnen varmer), lyser strømindikatoren ⚡.



Kalibrering av temperatur

Se figur 4 på separat figurark



Det kan oppstå avvik mellom hva ovnen registrerer av temperatur og hva som er faktisk temperatur der du oppholder deg i rommet. Det kan være flere årsaker til dette, men den mest vanlige er at ovnen står et lite stykke fra der du oppholder deg i rommet vanligvis. Når du setter feks 22 grader som ønsket temperatur på ovnen er det helt naturlig og intuitivt å tenke at dette er graden du ønsker i rommet der sofaen feks er plassert. Dog er det slik at ovnens temperatursensor er plassert på produktet selv, og dermed kan et slikt avvik oppstå. For å justere dette er alle Millovnere utstyrt med kalibreringsmuligheter, dvs at du kan justere hva ovnen registrerer av temperatur. OBS! Rommet må ha oppnådd en stabil temperatur før evt. kalibrering.

Trykk inn  2 ganger, og bruk piltastene (+ eller -) for å sette faktisk temperatur observert i rommet. Bekreft med  eller vent 5 sekunder for automatisk bekreftelse.

(Kan gjøres selv om man er koblet opp til WiFi)

Resette ovnen

Se figur 5 på separat figurark

Slå av ovnens hovedbryter. Slå på ovnen igjen, innen 5 sekunder trykk og hold inne . Etter 20 sekunder vil displayet vise "Fr", når du ser "Fr" frigjør , og ovnen tilbakestilles til fabrikkinnstillingene.

Huskefunksjon

Ovnen husker alle temperaturinnstillinger, og vil automatisk gå til ønsket romtemperatur etter strømbrudd. Hvis ovnen din er koblet til WiFi vil den automatisk koble seg tilbake til WiFi (hvor alle temperaturene er lagret) etter et strømbrudd.

"Åpent vindu" funksjon

Ovnen har en "åpent vindu" funksjon som aktiveres straks den registrerte romtemperaturen synker mer enn 5 grader Celsius på 15 minutter. Ovnen vil automatisk stoppe å varme og FO vil vises i displayet til ovnen.

I åpent vindu-modus holder ovnen 5 ° C (for å unngå frostskafer).

Varmeapparatet vil automatisk starte oppvarmingen igjen hvis temperaturen øker med minst 3 grader innen 15 minutter.

Du kan sette ovnen tilbake til normal modus ved å trykke på funksjonsknappen en gang. Åpent vindu-funksjonen kan deaktiveres / aktiveres ved å trykke og holde inne funksjonsknappen i 3 sekunder. Du kan også deaktivere / aktivere åpent vindu-funksjonen fra appen hvis den er koblet til WiFi.

Ovnen vil forbli i åpent vindu-modus i maksimalt 1 time, deretter vil den gå tilbake til normal oppvarmingsmodus.

Bruksanvisning

TIPS! Termostaten kan benyttes som en vanlig elektronisk termostat (det vil si at ovnen holder en jevn temperatur hele døgnet). Se avsnittet om bruk uten WiFi-tilkobling for mer informasjon.

Kontrollpanel

Se figur 6 på separat figurark

1. Display (viser ønsket romtemperatur)
2. WiFi indikator
3. Strømindikator — viser om ovnen trekker strøm eller ikke
4. Kontrollknapp (+)
5. Kontrollknapp (-)
6. WiFi-knapp
7. Funksjonsknapp
8. LED-lys som indikerer hvor mye effekt ovnen bruker

OBS! Ved strøbrudd vil termostaten automatisk koble seg til WiFi igjen, hvor alle temperaturer er lagret.

ADVARSEL! FØR OVNEN TAS I BRUK MÅ DEN VÆRE FESTET TIL EN VEGG. HVIS OVNEN IKKE ER MONTERT KORREKT ELLER SATT OPP SKJEVT, KAN DET FØRE TIL AT DEN IKKE VIL FUNGERE ELLER I VERSTE FALL BLI ØDELAGT.



Bruk uten WiFi-tilkobling

Sett ønsket temperatur uten WiFi-tilkobling



Se figur 7 på separat figurark

Trykk ned en av piltastene for å stille inn ønsket romtemperatur. Ovnen holder en jevn temperatur hele døgnet).

Barnesikring

Slå av ovnen ved å bruke hovedbryteren. Slå på ovnen igjen, innen 5 sekunder trykk og hold inne . Etter 3 sekunder vil displayet vise "CHL", når du ser "CHL" frigjør  og ovnen aktiverer / deaktiverer barnesikring.

Kommersiell lås

Du kan aktivere og deaktivere kommersiell lås fra appen. Men i tillegg kan du aktivere / deaktivere kommersiell lås fra selve ovnen. Slå av ovnen ved å bruke hovedbryteren. Slå ovnen på igjen, innen 5 sekunder trykk og hold inne . Etter 10 sekunder vil displayet vise "COL", når du ser "COL" frigjør  og ovnen aktiverer / deaktiverer kommersiell lås.



Bruk med WiFi-tilkobling

En gratis app er tilgjengelig for nedlastning for iOS og Android

Ved å koble ovnene dine sammen med iOS/Android enheten kan du blant annet gjøre følgende:

- Styre alle ovnene dine, uavhengig om de er plassert på flere lokasjoner. Alt styres av Mill-appen (med samme bruker)
Sett opp ukentlige program (eller bruk standardprogrammet som allerede ligger i appen) ved bruk av de 4 modusene: Komfort, Borte, Sov og AV
- Sett ønsket temperatur per rom for de ulike modusene
- Overstyr programmene for hele huset, et rom eller for en spesifikk ovn. Du trenger ikke å endre programmet selv om du kommer hjem tidligere enn vanlig en dag
- Aktiver feriemodus for å spare strøm når du er borte. Mill-appen øker temperaturen før du kommer tilbake fra ferie
- Gjør styring av huset enkelt ved å dele huset ditt med andre familiemedlemmer
- Hvis internettet er nede, følger ovnen sitt ukentlige program som er lagret i ovnen. Man kan enkelt slå av WiFi'en på ovnene og styre dem manuelt så ovnen holder en jevn temperatur gjennom hele døgnet.
- + mye mer

For å laste ned appen, søk etter "MillNorway", i Appstore eller Google Play og installer appen på enheten din.



Før bruk:

Vær oppmerksom på at Mill-appen må være installert før du kan koble til ovnene dine til WiFi-nettverket ditt. Du trenger da kun å følge instruksjonene i appen når du setter opp tilkoblingen med ovnen din. Ovnene vil kobles direkte til ruterens din via WiFi med 2,4 Ghz mode b/g/n. Bluetooth er nødvendig for tilkobling, så sørg for at den er aktivert. Minimum OS krav: iOS 8.0 og Android 5.0.

Gå inn på vår "Help Desk" på www.millnorway.com for mer informasjon eller om du har spørsmål til bruk av Mill-appen, tilkobling til WiFi og eventuelle andre spørsmål.

OBS! Ovnene kobler seg direkte på WiFi-ruterens din og man må derfor forsikre seg om at ruterens har tilstrekkelig kapasitet for antall aktive enheter koblet til samtidig.

Fargekoder (WiFi kontrolllys)

-  Ovnens WiFi er ikke satt opp til å være tilkoblet WiFi. Ovnens temperatur følger en jevn temperatur hele døgnet.
-  Ovnens WiFi er online i Mill-skyen
-  Ovnens WiFi er deaktivert av bruker
-  Ved oppsett/tilkobling til Mill-appen og skyen vil lyset blinkre i flere ulike hastigheter. Dette er normalt
-  Ovnens WiFi har problemer med å koble seg til eller å finne WiFi-signalet. Vennligst kontroller følgende:
 1. Vennligst slå ovnen AV og PZ igjen
 2. Vennligst restart WiFi-ruteren
 3. Vennligst sjekk WiFi-ruteren for å forsikre deg om at du er innenfor kapasiteten til antall aktive enheter tilkoblet på samme tid
 4. Vennligst kontroller at 2,4 Ghz er aktivert. Om problemet vedvarer ta kontakt med kundeservice.
-  Ovnens WiFi er offline og har ikke kontakt med Mill-skyen

Aktivere WiFi

Se figur 8 på separat figurark

Trykk på «add device» på hovedskjerm i Mill-appen. Følg så anvisningene i appen.

Deaktivere WiFi

Se figur 9 på separat figurark

Trykk 1 gang på WiFi-knappen. Ovnens WiFi kan nå brukes slik beskrevet på side 7 (uten bruk av WiFi). Gjelder kun hvis WiFi allerede er satt opp.

Koble tilbake til WiFi

Se figur 10 på separat figurark

Trykk på WiFi knappen 1 gang. Gjelder kun hvis WiFi allerede er satt opp.

Slette WiFi-innstillinger

Se figur 11 på separat figurark

Slette WiFi-innstillinger: Trykk og hold WiFi-knappen inne i 5 sekunder.



Vedlikehold

1. Ta alltid ut stikkkontakten og la ovnen bli kald før rengjøring
2. Tørk ovnen regelmessig med en lett fuktig klut og tørk av overflaten før du skrur på ovnen igjen
3. I fyringssesongen bør ovnen rengjøres minst 1 gang i måneden

OBS! Ovnen må aldri legges i vann.

Unngå bruk av vaskemidler ved renhold.


Det må aldri komme vann inn i ovnen da dette kan medføre fare.

4. Støv etc. fjernes med en myk klut
5. Ovnen kan lagres på et tørt og rent sted
6. Hvis ovnen skulle slutte å virke må du ikke forsøke å reparere den selv da det kan medføre brannfare/elektrisk støt.

Garanti

Garantien gjelder i 2 år. I denne tiden vil ovnen bli reparert eller erstattet om feil skulle oppstå. Forutsetningen er at ovnen er brukt i henhold til denne bruksanvisningen og fremlegging av kjøpskvittering. Skulle det oppstå feil med ovnen, ta kontakt med butikken der den ble kjøpt eller med importøren.

Avfallshåndtering

Symbolet  angir at dette produktet ikke skal kastes sammen med vanlig husholdningsavfall. For å hindre mulig skade på miljø eller helse, må dette produktet leveres til resirkulering av elektrisk og elektronisk utstyr. Din lokale el. forretning eller miljøstasjon har en ordning for å ivareta en miljøriktig destruksjon og resirkulering av slike produkter.



mill

Mill International AS

Grini Næringspark 10

1361 Østerås

Norway

www.millnorway.com



Vigtig sikkerhedsinformation

Du skal overholde de almindelige retningslinjer for sikkerhed, når du bruger elektriske produkter, især i nærværelse af børn.



ADVARSEL! For at undgå elektrisk stød eller skader på grund af varmen skal du altid sikre dig, at stikket er taget ud, før varmeapparatet flyttes eller rengøres.

LÆS INSTRUKTIONERNE GRUNDIGT

- Dette produkt er udelukkende beregnet til hjemmebrug.
- Kontrollér, at varmeapparatet er forbundet med husets almindelige ledningsnet som angivet på varmeapparatet.
- Nye varmeapparater vil afgive en særlig lugt, første gang de er i brug. Dette ophører efter kort tid og er fuldstændigt harmløst.
- Kontrollér, om der er faldet dele af emballagen, såsom flamingo eller pap, ned i varmelementerne på varmeapparatet. Disse dele skal fjernes for at undgå ubehagelige lugte.
- Undgå, at varmeapparatet bliver overophedet — **må ikke tildækkes.**
- Sluk altid for varmeapparatet, og tag stikket ud, når det ikke bruges i lang tid.
- Vær særlig opmærksom, hvis varmeapparatet bruges i rum, hvor der opholder sig børn, handicappede eller ældre.
- Varmeapparatet må ikke placeres direkte under en stikkontakt.
- Ledningen må ikke lægges ind under nogen form for gulvtæppe. Sørg for, at ledningen er lagt på en sådan måde, at ingen kan snuble over den.
- Varmeapparatet må ikke anvendes, hvis enten ledningen eller stikket er beskadiget. Varmeapparatet må ikke bruges, hvis det er faldet ned på gulvet eller er beskadiget på anden måde, der forårsager funktionsfejl.
- Ledningen skal repareres af fabrikanten eller af en ekspert, hvis den er blevet beskadiget, for at undgå farlige situationer.
- Undgå at bruge forlængerledninger, der kan overophedes og muligvis starte en brand.
- Tildæk aldrig luftåbningerne på varmeapparatet. Undgå potentiel brandfare ved at sikre dig, at luftindtagene ikke er blokerede eller tildækkede. Varmeapparatet skal bruges i rum med normale, flade gulve.



- Varmeapparatet må ikke installeres i nærheden af letantændelige materialer, fordi der altid er en risiko for brand.
- Varmeapparatet må aldrig bruges i rum, som f.eks. en garage, hvor der opbevares benzin, maling eller andre letantændelige væsker.
- Berør aldrig varmeapparatet med våde hænder. Varmeapparatet skal installeres på en sådan måde, at en person, der tager bruse- eller karbad, ikke kan komme i kontakt med det.
- Visse dele af dette produkt kan blive meget varme og forårsage forbrændinger. Der skal udvises særlig opmærksomhed, hvor børn og udsatte mennesker er til stede.
- Varmeapparatet skal slukkes, stikket skal tages ud, og varmeapparatet skal køle af, inden det flyttes.
- Undgå at overbelaste ledningsnettet (kredsløbet), hvor varmeapparatet er tilkoblet. Varmeapparatet kan overbelaste det elektriske kredsløb, hvis andre elektriske enheder tilkobles den samme stikkontakt.
- Benyt ikke dette varmeapparat i små rum, når der opholder sig personer i rummet, der ikke kan forlade det ved egen hjælp, medmindre det er under konstant overvågning.
- Produktet må ikke bruges af børn under 8 år og personer med nedsatte fysiske eller mentale evner eller manglende erfaring og viden, medmindre de er under opsyn eller er blevet instrueret i sikker brug af produktet og forstår de involverede farer.
- Børn må ikke lege med produktet. Rengøring og vedligeholdelse må ikke udføres af børn uden overvågning.
- Børn under 3 år skal holdes væk fra produktet, medmindre de er under konstant opsyn.
- Børn mellem 3 og 8 år må kun TÆNDE og SLUKKE produktet under forudsætning af, at produktet er monteret i henhold til samlevejledningen, og børnene har modtaget instruktion eller vejledning i sikker brug af produktet og forstår de involverede farer.
- Brug ikke varmeapparatet i umiddelbar nærhed af et badekar, et brusebad eller en swimmingpool.

ADVARSEL! Varmeapparatet må ikke bruges, hvis glaspanelerne er beskadigede (gælder for produkter med modelnavne, der starter med GL).



Viktig säkerhetsinformation

Vanliga säkerhetsregler måste alltid följas vid användning av elektroniska produkter, särskilt när det finns barn i närheten



VARNING! För att undvika elektriska stötar och brännskador måste du se till att kontakten alltid är utdragen innan radiatoren flyttas eller rengörs.

LÄS BRUKSANVISNINGEN NOGGRANT

- Produkten är bara till för hemmabruk
- Se till att produkten är kopplad till husets vanliga elnät, enligt märkningen på produkten
- Nya produkter kan lukta lite konstigt när de används första gången. Lukten försvinner snabbt och är helt ofarlig.
- Se till att inga förpackningsrester (cellplast/papp) har fallit ned på värmeelementen i produkten. Sådana rester måste plockas bort för att undvika dålig lukt.
- Se till att produkten inte överhettas — **den får inte övertäckas.**
- Stäng av produkten (med Off-knappen) och dra ut kontakten när den inte ska användas på ett tag
- Var särskilt uppmärksam om produkten används i ett rum där barn, funktionshindrade eller äldre befinner sig
- Produkten får inte ställas precis under ett eluttag
- Sladden får inte dras under mattor eller liknande. Se till att den ligger så att ingen snubblar på den
- Produkten får inte användas om sladden eller kontakten är skadad. Den får inte användas om den har fallit i marken (golvet) eller är skadad på annat sätt, så att den inte fungerar normalt
- Om sladden får skador måste den lagas av tillverkaren eller av någon yrkeskunnig
- Undvik att använda förlängningsladd, eftersom en sådan sladd kan överhettas och bli brandfarlig
- Täck aldrig för produktens luftintag. För att undvika brandfara är det viktigt att se till att produktens luftintag inte är tilltäppt eller övertäckt. Använd produkten i rum med vanliga plana golv



- Produkten får inte monteras i omedelbar närhet till något brännbart material, eftersom det alltid finns risk för brand
- Produkten får inte användas i rum där bensin, målarfärg eller andra lättantändliga vätskor förvaras, t.ex. i garage
- Vidrör aldrig en elektrisk radiator med våta händer
- Vissa delar av produkten kan bli mycket varma och orsaka brännskador. Var särskilt uppmärksam då barn och utsatta personer är närvarande
- Produkten måste vara avslagen och sval och kontakten utdragen när den flyttas
- Undvik att överbelasta det elnät (strömkrets) som produkten är uppkopplad på. Om andra elektriska apparater är kopplade till samma eluttag eller strömkrets måste de tas med i beräkningen
- Använd inte produkten i små rum när personer som inte kan lämna rummet på egen hand är närvarande, såvida inte ständig tillsyn ges
- Produkten får inte användas av barn under åtta (8) år och inte heller av personer med nedsatt fysisk eller mental förmåga eller någon som saknar erfarenhet och kunskap, om dessa inte får vägledning eller instruktioner gällande användningen av produkten på ett säkert sätt och som förstår de risker som är involverade
- Barn ska inte leka med produkten. Rengöring och underhåll får inte utföras av barn utan översyn
- Barn under tre (3) skall hållas borta från produkten om de inte har kontinuerlig tillsyn
- Barn i ålder tre (3) till åtta (8) får bara slå AV/PÅ produkten, förutsatt att produkten är monterad enligt monteringsanvisningen, samt att barnen har fått vägledning gällande användning av produkten på ett säkert sätt samt att de förstår riskerna som är involverade
- Använd inte produkten i närheten av ett bad, en dusch eller en pool

WARNING! Produkten får inte användas om glaspanelerna är skadade (detta gäller de produkter vars modellnamn startar med GL).



Tärkeät turvallisuustiedot

Noudata aina yleisiä turvallisuusohjeita, kun käytät sähkölaitteita, erityisesti jos paikalla on lapsia.



VAROITUS! Sähköiskun tai palovamman ehkäisemiseksi varmista aina ennen lämpöpatterin siirtämistä tai puhdistamista, että sen pistoke on irrotettu sähkövirrasta.

LUE KÄYTTÖOHJE HUOLELLISESTI

- Tuote on tarkoitettu vain kotikäyttöön
- Kytke lämpöpatteri kodin tavalliseen sähköverkkoon lämpöpatterin merkintöjen mukaisesti
- Uudesta lämpöpatterista leviää ensimmäisellä käyttökerralla erikoinen tuoksu. Tuoksu on täysin vaaraton ja häviää lyhyen ajan kuluessa
- Tarkista, ettei lämpöelementteihin ole jäänyt pakkausmateriaalin jäämiä. Tällaiset jäämät tulee poistaa, jotta ne eivät pääse aiheuttamaan epämiellyttävää hajua
- Älä anna lämpöpatterin ylikuumentua — **ei saa peittää**
- Kun lämpöpatteria ei käytetä pitkään aikaan, sammuta se kiertämällä säädin Off-tilaan ja irrota pistoke pistorasiasta
- Ole erityisen tarkkaavainen, jos lämpöpatteria käytetään huoneessa, jossa oleilee lapsia, vammaisia tai vanhuksia
- Lämpöpatteria ei saa asentaa suoraan pistorasian alapuolelle
- Johto ei saa kulkea minkäänlaisen maton alla. Aseta johto niin, ettei kukaan pääse vahingossa kompastumaan siihen
- Lämpöpatteria ei saa käyttää, jos sen johto tai pistoke on vaurioitunut. Laitetta ei saa käyttää, jos se on pudonnut maahan (lattialle) tai se on muutoin vahingoittunut niin, ettei se enää toimi normaalisti
- Jos virtajohto on vahingoittunut, sen korjaaminen on vaaratilanteiden välttämiseksi jätettävä valmistajan tai ammattilaisen tehtäväksi
- Vältä käyttämästä jatkojohtoa, koska se saattaa ylikuumentua ja aiheuttaa tulipalon
- Älä koskaan peitä lämpöpatterin tuuletusaukkoja. Tulipalon välttämiseksi on syytä tarkistaa säännöllisesti, etteivät tuuletusaukot ole tukkeutuneet tai peittyneet. Lämpöpatteri tulee asentaa huoneeseen, jossa on tavallinen, tasainen lattia

- Lämpöpatteria ei saa asentaa palavien materiaalien välittömään läheisyyteen, koska niihin liittyy aina tulipalon riski
- Lämpöpatteria ei saa käyttää autotalleissa tai muissa tiloissa, joissa säilytetään bensiiniä, maalia tai muita herkästi syttyviä aineita
- Lämpöpatteri on hyväksytty käytettäväksi märkätilojen alueella 2
- Älä koskaan kosketa sähköpatteria märillä käsillä. Lämpöpatteri tulee asentaa paikkaan, jossa suihkussa tai kylvyssä oleva ihminen ei pääse siihen käsiksi
- Lämpöpatteri kuumenee käytössä. Noudata varovaisuutta sen lähetyvillä, jotta et polta itseäsi
- Jotkut tämän tuotteen osat voivat tulla erittäin kuumiksi ja aiheuttaa palovammoja. Erityistä huomiota on kiinnitettävä paikoissa, joissa läsnä on lapsia ja haavoittuvassa asemassa olevia ihmisiä
- Jos lämpöpatteria on siirrettävä, sammuta se, irrota pistoke pistorasiasta ja anna lämpöpatterin jäähtyä ennen siirtämistä
- Vältä ylikuormittamasta sähköverkkoa (sulaketta), johon lämpöpatteri on liitetty. Noudata varovaisuutta, jos samaan pistorasiaan tai sulakkeeseen on liitetty muita sähkölaitteita
- Älä käytä tätä lämmitintä pienissä tiloissa, kun niissä on henkilöitä, jotka eivät pysty lähtemään omaan huoneeseensa, ellei ole jatkuvaa valvontaa
- Laitetta eivät saa käyttää ilman valvontaa alle 8-vuotiaat lapset tai henkilöt, joilla on alentunut fyysinen tai henkinen toimintakyky tai joilta puuttuu tarvittava kokemus ja osaaminen, ellei heitä ohjeisteta laitteen turvalliseen käyttöön ja varmisteta, että he ymmärtävät käyttöön liittyvät vaarat
- Lasten ei saa antaa leikkiä laitteella. Lasten ei saa antaa siivota tai huoltaa laitetta ilman valvontaa
- Alle 3-vuotiaiden lasten ei saa antaa oleilla laitteen lähetyvillä ilman valvontaa
- 3–8 vuotiaat lapset saavat kytkeä laitteen päälle tai pois, jos laite on asennettu asennusohjeiden mukaan ja lapsia on ohjeistettu laitteen turvalliseen käyttöön ja heidän on varmistettu ymmärtävän käyttöön liittyvät vaarat
- Älä käytä tätä lämmitintä kylpyammeen, suihkun tai uima-altaan välittömässä läheisyydessä

VAROITUS! Lämmitintä ei saa käyttää, jos lasipaneelit ovat vaurioituneet (tämä koskee tuotteita, joissa mallinimet alkavat GL:llä).

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): PA400WIFI3, GL400WIFI3



Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,40	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,40	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,40	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL600WIFI3, PA600WIFI3, PA600WIFI3B, GL600WIFI3B

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,60	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,60	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,60	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η_s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL700WIFI3, PA700WIFI3, PA700WIFI3B, GL700WIFI3B

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,70	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,70	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,70	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				





Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL800LWIFI3, PA800LWIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,80	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,80	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,80	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s):GL850LWIFI3, PA850LWIFI3



Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,85	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,85	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,85	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL900WIFI3, PA900WIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,90	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,90	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,90	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	el _{SB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η_s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1000WIFI3, PA1000WIFI3, GL1000LWIFI3, PA1000LWIFI3, PA1000LWIFI3B, GL1000WIFI3B

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,0	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,0	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				





Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1050LWIFI3, PA1050LWIFI3, PA1050LWIFI3B, GL1050LWIFI3B

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,05	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,05	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,05	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1200WIFI3, PA1200WIFI3, PA1200WIFI3B, GL1200WIFI3B

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,20	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,20	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,20	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1300WIFI3, PA1300WIFI3, PA1300WIFI3B, GL1300WIFI3B

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,3	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,3	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,3	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η_s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): PA1500WIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,5	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,5	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,5	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): PA2000WIFI3

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,0	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	2,0	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	2,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				