


FOR NEXA BRIDGE USERS

Connect one or more smoke alarms to Nexa Bridge

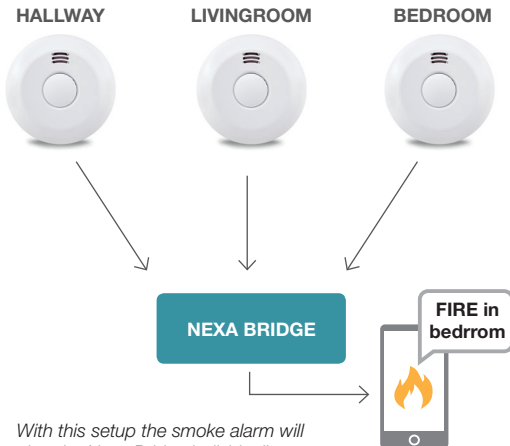


With this setup the smoke alarm will alert the Nexa Bridge individually.

If you want to connect the smoke alarms individually:

1. Select add device, then select Fire & Safety
2. Keep the test button on the smoke alarm pushed down until the app confirms.
3. Do the same procedure for all the smoke alarms that you want to connect.

Now they work individually with Nexa Bridge and you can create notifications and rename your smoke alarms for each room. In this mode, the smoke alarms are not connected to each other.

Interconnected smoke alarms and Nexa Bridge

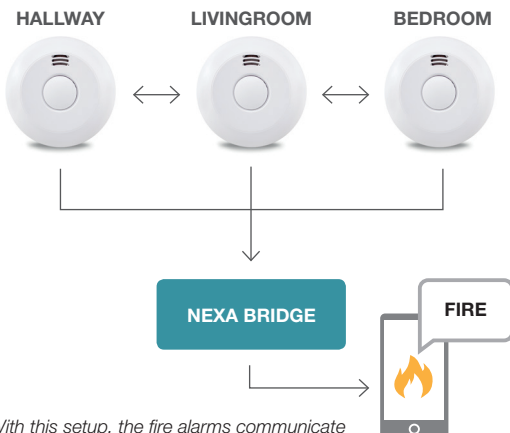

With this setup, the fire alarms communicate with each other, but the Bridge can not identify which one detected smoke.

If you have interconnected smoke alarms, you have initially created a "Master".

1. Select add device, then select Fire & Safety
2. Keep the test button on the "Master" pushed down until the app confirms

In this configuration, all detectors will alert Nexa Bridge, however it is not possible for the Bridge to identify which unit that has detected smoke.