


Important: Read All Instructions Prior to Installation

**Function introduction** 




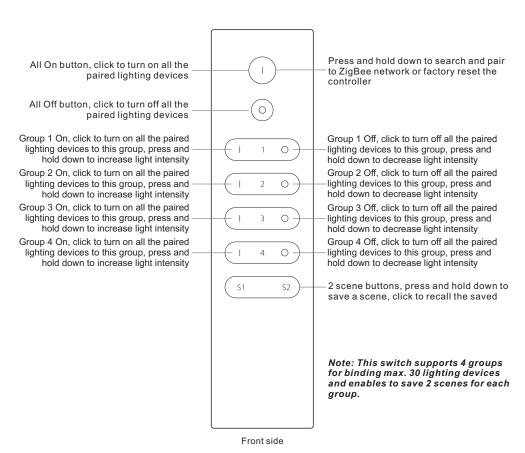

Note:Before the first use, please remove the protective film on the battery.

### **Product Data**

Protocol	ZigBee 3.0
Operation Voltage	3VDC (CR2032)
Transmission Frequency	2.4GHz
Transmission Range (free field)	30m
Protection Type	IP20
Dimming Range	0.1%-100%
Dimension	150x38.6x12mm
Protection Grade	IP20

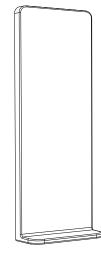


Magnetic Bracket

- ZigBee dimmer switch based on ZigBee 3.0
- Enables to pair ZigBee lighting devices via touchlink commissioning without coordinator
- Supports find and bind mode to pair with ZigBee lighting devices in the same network
- Supports 4 groups for binding max. 30 lighting devices
- 2.4 GHz global operation
- · Long battery life mesh technology
- · Transmission range up to 30m
- · Compatible with universal ZigBee Gateway products
- Compatible with universal single color ZigBee lighting devices

#### Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

### Quick Start (Simplified Operations Compared to Standard Operations in "Operation" part)

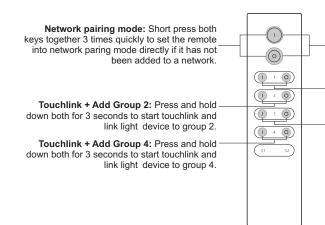

Factory reset: Short press both keys together 3 times quickly to factory reset the remote directly if it has already been added to a network.

Touchlink + Add Group 1: Press and hold down both keys for 3 seconds to start touchlink and link light device to group 1.

-Touchlink + Add Group 3: Press and hold down both keys for 3 seconds to start touchlink and link light device to group 3.

# ZigBee Clusters Supported by This Remote Are As Follows:

Input clusters:

Basic

Power Configuration

Identify

Diagnostics

Output clusters:

 Identify Scenes Group


· On/off · Level control Ota

## Operation

- 1. This ZigBee Dim remote is a wireless transmitter that communicates with a variety of ZigBee compatible systems. This transmitter sends wireless radio signals that are used to remotely control a compatible system.
- 2. This ZigBee remote supports 4 groups for binding max. 30 lighting devices and enables to control single color ZigBee lighting devices.
- 3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)

Step 1: Remove the remote from previous zigbee network if it has already been added to it, otherwise pairing will fail. Please refer to the part "Factory Reset Manually".

Step 2: From your zigbee controller or hub interface, choose to add device or accessory and enter Pairing mode as instructed by the controller.

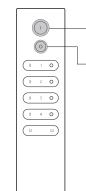


Step 3: Press and hold down until LED indicator turns on.

Step 4: Immediately short press to search nearby network, indicator flashes every 1 second, 20 seconds timeout if there is no network. Indicator will then blink 5 times quickly for successful pairing.


Note: 1) After pairing successfully, the remote information will appear on the controller or hub interface.

- 2) No remote information will appear on the hub interface if pairing to Philips Hue Bridge.
- 4. Removed from a Zigbee Network through Coordinator or Hub Interface

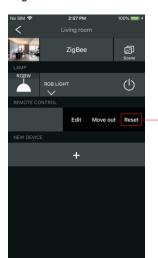

From your ZigBee controller or hub interface, choose to delete or reset the remote as instructed, indicator flashes 3 times quickly to indicate successful removing.


## 5. TouchLink to a Zigbee Lighting Device

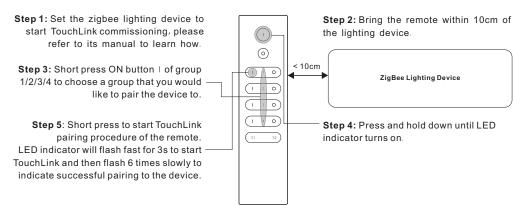


Note: 1) Directly TouchLink (both not added to a ZigBee network), each remote can link with 30 devices.

- 2) TouchLink after both added to a ZigBee network, each remote can link with max. 30 devices.
- 3) For Hue Bridge & Amazon Echo Plus, add remote and device to network first then TouchLink.
- 4) After TouchLink, the remote can control the linked lighting devices.

## 6. Remove a Touchlink Paired ZigBee Lighting Device

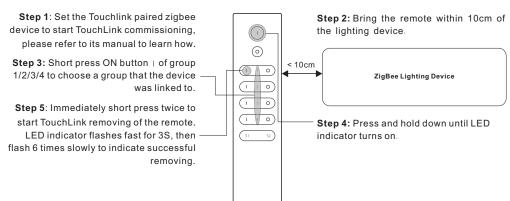

#### 7. Factory Reset Manually

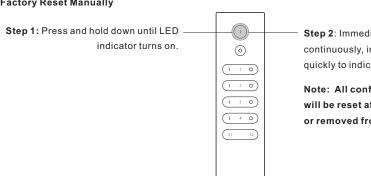


Step 2: Immediately short press 5 times continuously, indicator flashes 3 times quickly to indicate successful reset.

Note: All configuration parameters will be reset after the remote is reset or removed from the network.


## 8. Factory Reset a Lighting Device (Touch Reset)

Note: the device shall be added to a network, the remote added to the same one or not added to any network.

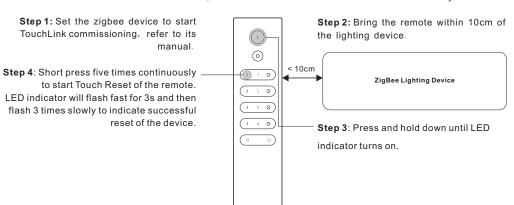


#### 9. Find and Bind a Zigbee Lighting Device


Note: Make sure the device and remote already added to the same zigbee network.

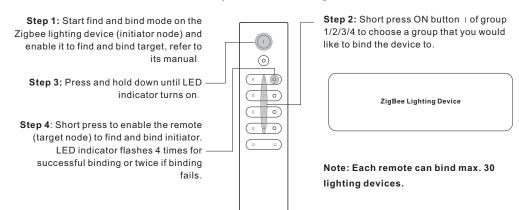


## 10. Find and Unbind a Zigbee Lighting Device

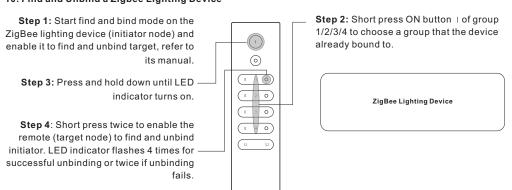

## 11. Clear All Find and Bind Mode Paired Lighting Devices of a Group

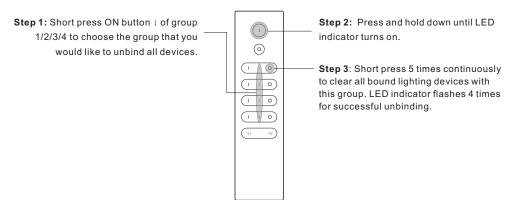


### 12. Setup a Network & Add Devices to the Network (No Coordinator or Hub Required)

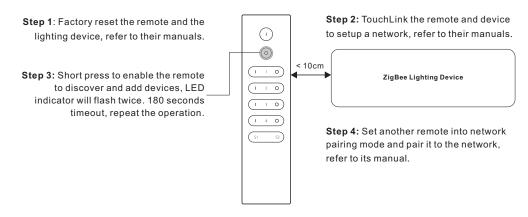

- Step 5: Add more remotes to the network as you would like.
- Step 6: Factory reset the lighting devices that you would like to add to the network, refer to their manuals.
- **Step 7**: Touchlink to pair the added remotes and lighting devices you would like to add, the devices will be added to the network through Touchlink, refer to their manuals.

#### 13. How to Save and Recall Scenes

#### 1) Save Scenes

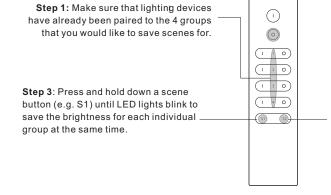

**Step 2:** Press and hold □ or ○ button of the 4 groups to adjust a desired brightness for each individual group.

Step 4: Repeat above 3 steps, and adjust another brightness for each individual group, then press and hold the other scene button (e.g. S2) to save the brightness for each individual group at the same time.

## 2) Recall the Saved Scenes

Step 1: Short press button S1/S2 to recall a saved scene for each individual group at the same time.

# 14. OTA

The remote supports firmware updating through OTA, and will acquire new firmware from zigbee controller or hub every 10 minutes automatically.

## 15. How to Check Whether the Remote Belongs to a Network or not

Activate the remote by clicking All On/Off button (indicator on), then short press any other buttons except group buttons, indicator blinking 3 times means the remote does not belong to any network, blinking once or twice means it has already been added to a network.

# 16. Battery Power Monitor Function

The remote will report battery power value to the coordinator under following situations:

- When powered on.
- When short pressing both | and O buttons of group 1 simultaneously.
- When operating the switch to send data packets (over 4 hours since last operation).
- When added to the network by a coordinator.

Importer: Namron AS Nedre kalbakkvei 88B 1081 Olso Norway